


## Baikal Miner IP Address Setting Guide

The following step is for setting static or dhcp IP address of Baikal miner.

### Static IP Address Setting.

1. Execute MinerIpConfig.exe

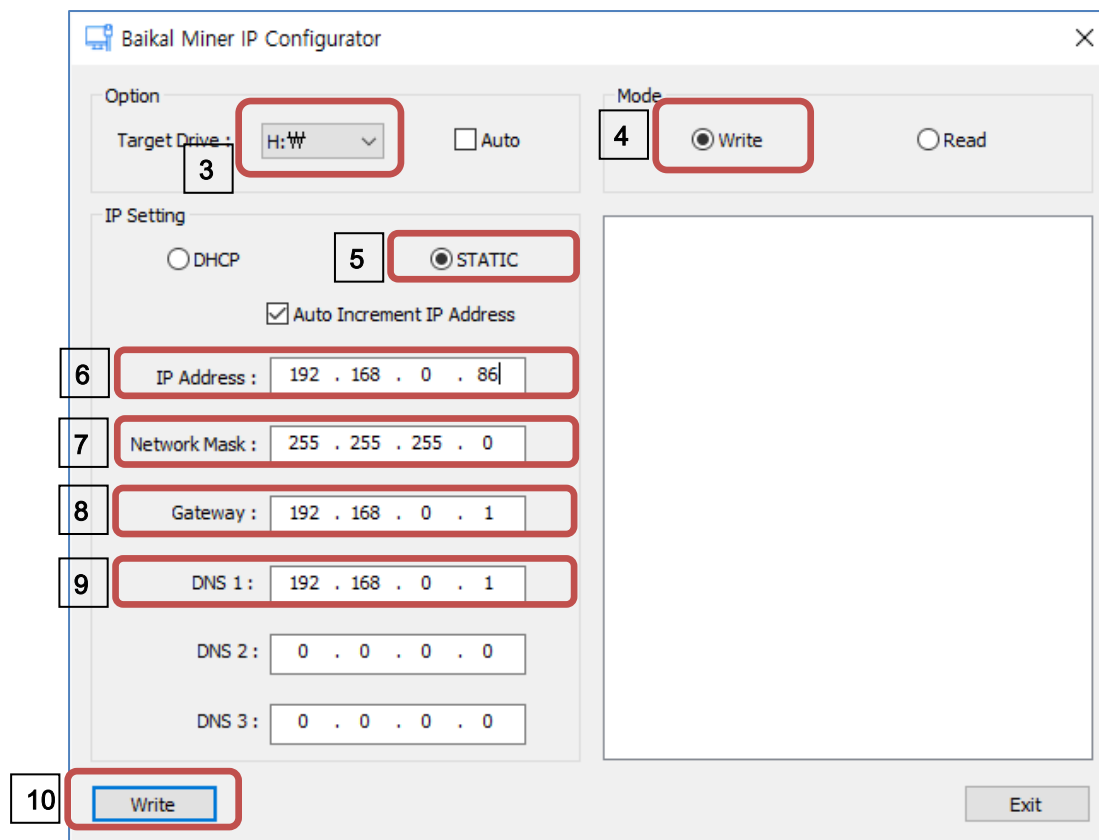


2. Insert a microSD.
3. Select the drive that the microSD inserted.
4. Select "Write" radio button.
5. Select the "STATIC" radio button.
6. Enter IP address.
7. Enter Network mask.
8. Enter Gateway address.
9. Enter DNS Server address.

10. Click "Write" button.

When the operation is done successfully,


The message like "Save Static IP : xxx.xxx.xxx.xxx : Okay" is displayed on the right side.

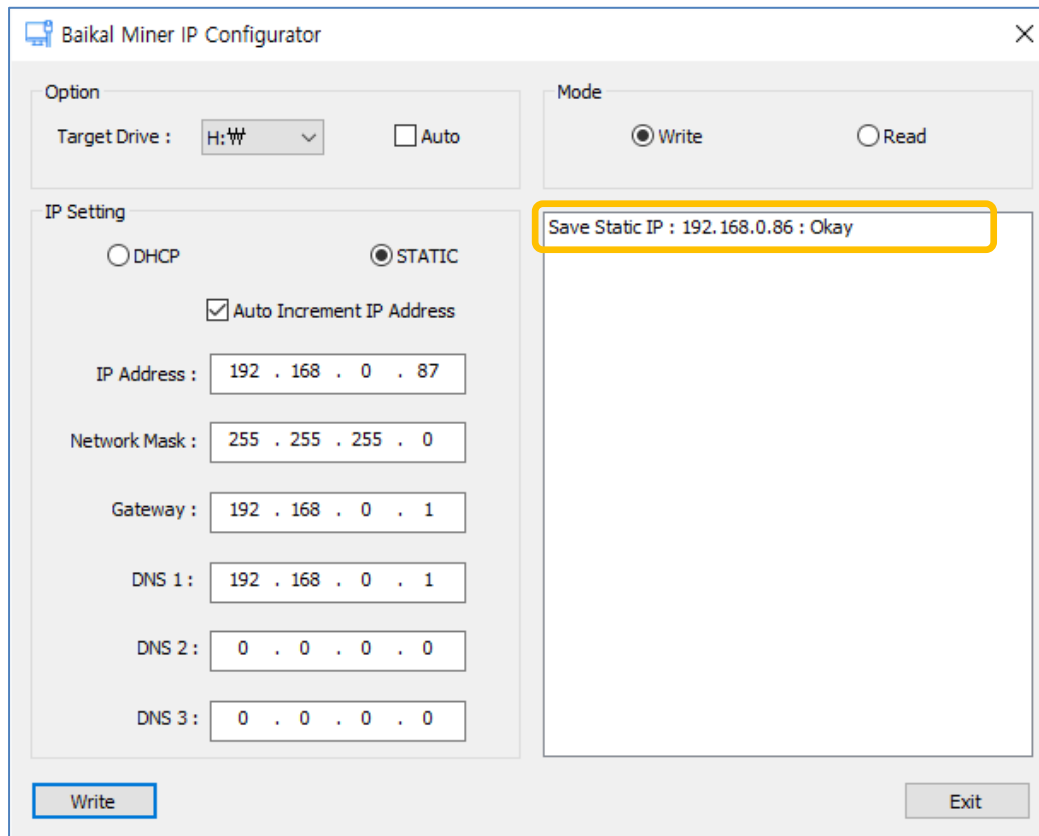

11. Remove the microSD from the computer and insert it to the Baikal miner.

## DHCP Setting.


1. Execute MinerIpConfig.exe

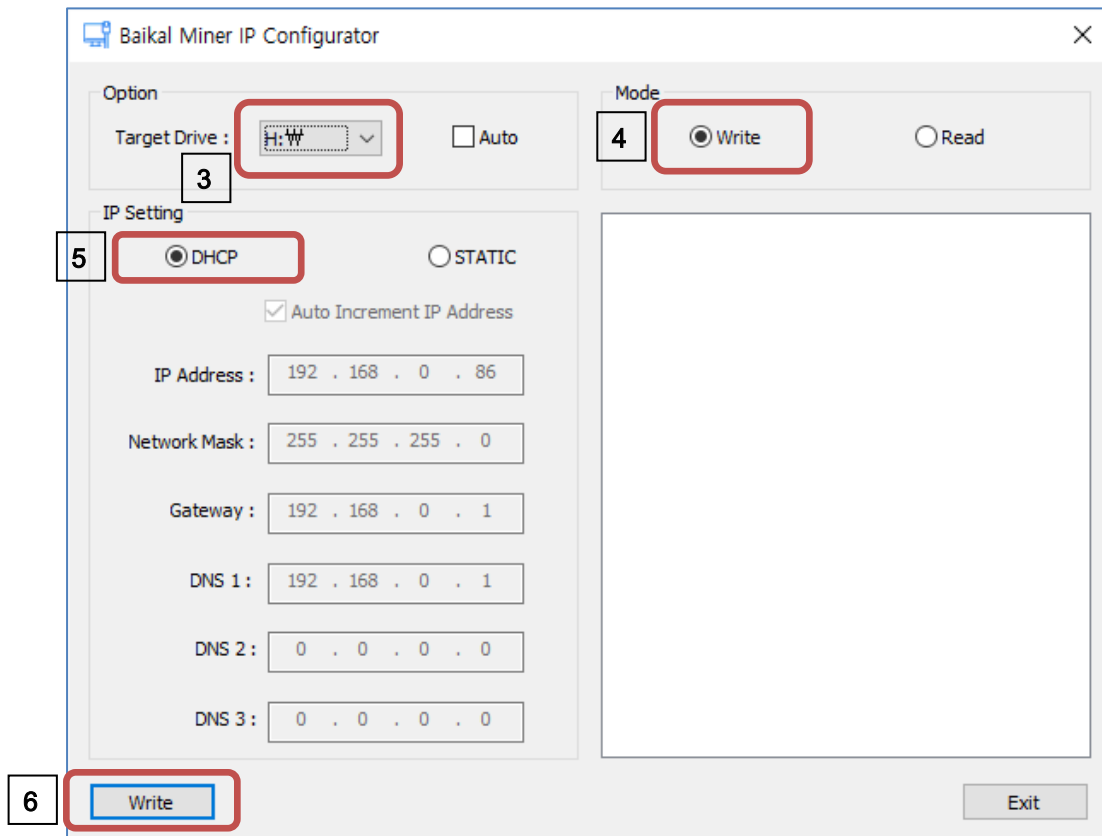

2. Insert a microSD.
3. Select the drive that the microSD inserted.
4. Select "Write" radio button.
5. Select the "DHCP" radio button.
6. Click "Write" button.

When the operation is done successfully,

The message like "Save DHCP : Okay" on the right side." is displayed on the right side.

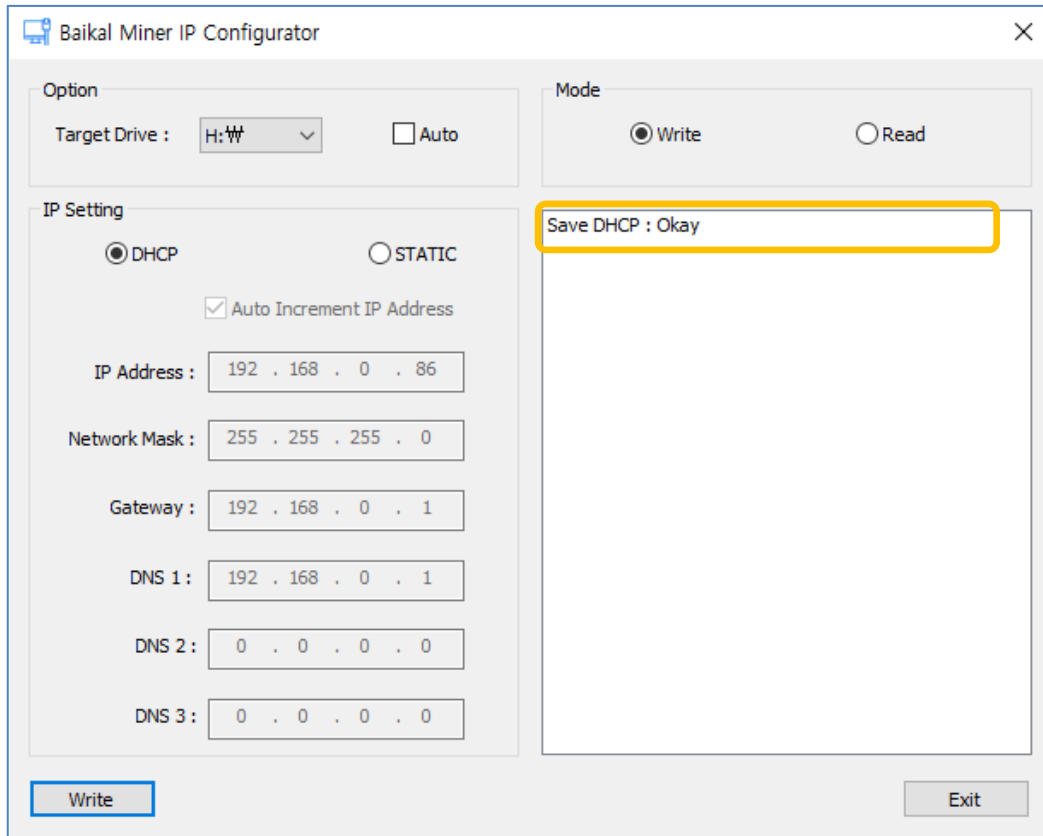

7. Remove the microSD from the computer and insert it to the Baikal miner.

### Useful Options

The following options are useful when set the IP address to a large number of microSD.

Auto Increment IP Address :

IP address is increased automatically when write operation is done.

Auto :

IP address is set automatically when a microSD inserted to the target drive.

### Download

<http://pan.baidu.com/s/1dFg9rZ7>